

Date d'édition : 22.12.2024

**Ref : 4746420**

**Pince pour couper la fibre optique**



For daily use and for all cases where the cutting angle is not critical, this cleaver and breaker are ideally suited. By means of a ceramic blade, the fibre is scratched and subsequently broken by bending the elastic fibre latch. The fibre with removed plastic coating is inserted in such a way that the remaining plastic coating stops at the stopper and the coating free part inside the rubber clamp. By gently bending the support and briefly press the ceramic blade of the cutter lever onto the fibre. The fibre will break.