

Date d'édition : 07.04.2025



Ref : 8-2214080-000-12-0

BS 0.8 Contrôleur d'isolation

BS 0.8 Ground-leakage monitor The fault to ground is indicated by a signal lamp. After elimination of the fault to ground, the normal function may be re-established by operation of the pushbutton "Reset". The pushbutton "Test" is used for verifying the function of the equipment. The sensitivity may be selected with a switch.